Rubber Feet for EC2U and EC3U Enclosures

ECUF




Description

The ECUF Rubber Feet can be installed on the EC2U, EC3U, and EC4U 19" Electronic Enclosures (not included) to facilitate benchtop usage. The included M4 screws and 3.0 mm hex key are used to attach the feet to the M4 taps located on the bottom of the EC2U, EC3U, and EC4U enclosures.

Installation

1. Ensure that the enclosure is empty of any electronic parts.
2. Gently turn the enclosure upside-down so that the bottom is accessible.
3. Locate the four M4 taps on the bottom of the enclosure, as illustrated below.
4. Place the gray aluminum side of the foot against the M4 tap; then, use the 3 mm hex key to screw in the M4 screws (both included). Repeat until all feet are installed.

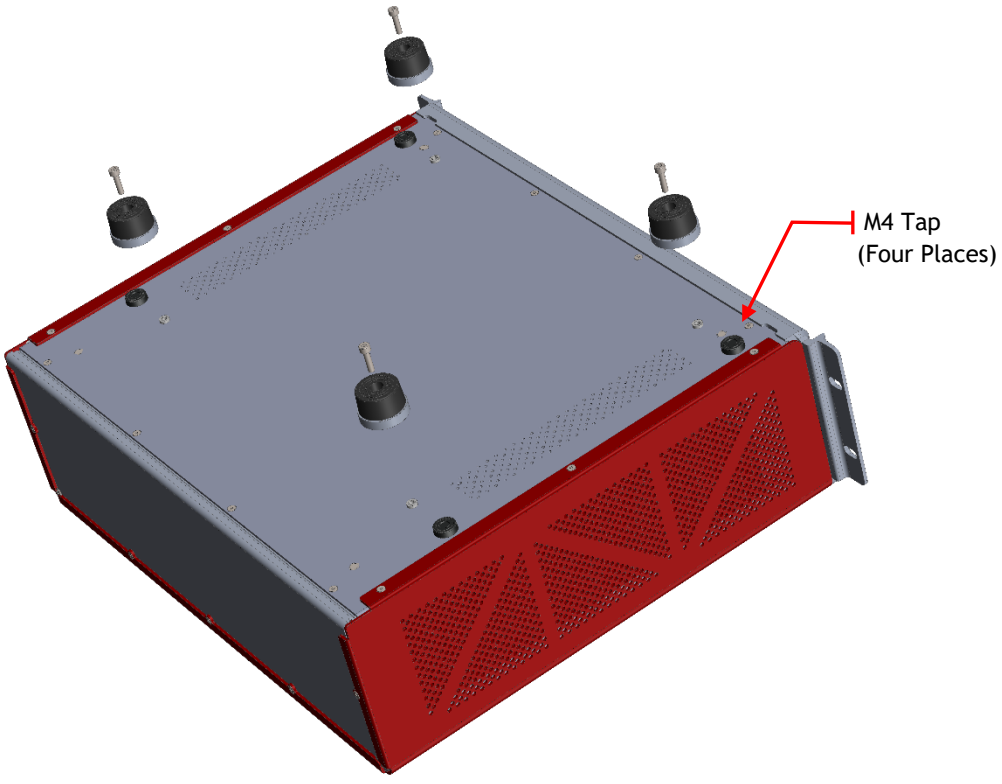

ECUF Feet Installation on EC3U Enclosure